



GB Fitting Instructions:	SIDE BAR
D Montageanleitung:	SCHWELLERROHR
NL Montagevoorschrift:	SIDE BAR
F Instructions de montage:	MARCHE-PIEDS
E Instrucciones de montaje:	JUEGO PROT. DE PARA. TRASERA
I Schema di montaggio:	PEDANE LATERALI
S Manual:	SIDOFOTSTEG

NISSAN Primastar RENAULT Trafic • OPEL Vivaro



Type Nr.: RT/2 Ausf.: KR/LR
Best.-Nr.: REN 1053/REN 1055



60 Min.



All rights reserved to modify the text


Type-Nr.: RT/2 Ausf. KR/LR

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis
Herramientas necesarias / Utensile necessarie / Verktug somsomkrävs

10/13/17

ø 6,5 mm
ø 8,5 mm

Nm

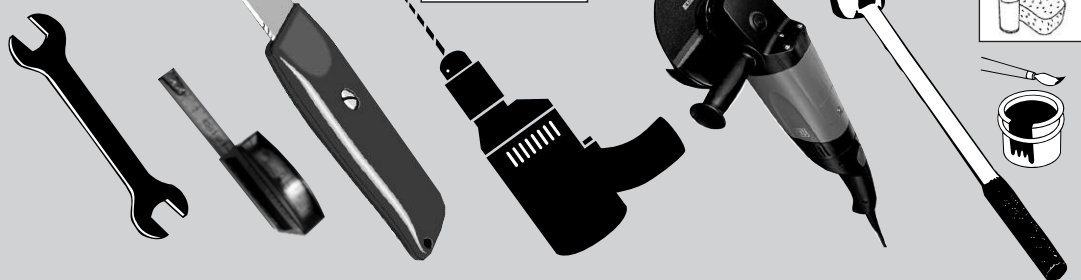

COBRA
TECHNOLOGY & LIFESTYLE

® Fitting Instructions:
① Montageanleitung:
② Montagevoorschrift:
③ Instrucciones de montaje:
④ Instrucciones de montaje:
⑤ Schema di montaggio:
⑥ Manual:

SIDE BAR
SCHWELERROHR
SIDE BAR
MARCHÉ-PIEDS
JUEGO PROT. DE PARA. TRASERA
PEDANE LATERALI
SIDOPOTSTEG

**NISSAN Primastar
RENAULT Trafic · OPEL Vivaro**

Type Nr.: RT/2 Ausf. KR/LR
Best-Nr.: REN 1053/REN 1055

60 Min.








All rights reserved to modify the text

1 **ISSUE 3** 15.10.2014

Parts list / Teilleiste / Onderdelenlijst / Liste de pièces
Lista de accesorios / Lista di pezzi / Artikel lista


1		2 x
2	Front LHS	1 x
2a	Front RHS	1 x
3	Middle LHS	1 x
3a	Middle RHS	1 x
4	Rear	2 x
5	Stiftschraube M 8	2 x
6	M 8	2 x
7	ø 8,1	2 x
8	M 10 x 25	12 x
9	M 10	12 x
10	ø 10,2	12 x
11	ø 10,4	6 x
12	M 6 x 20	4 x
13	M 6	4 x
14	ø 6,1	4 x
15	Verstärkung	2 x

Type-Nr.: RT/2 Ausf. KR/LR

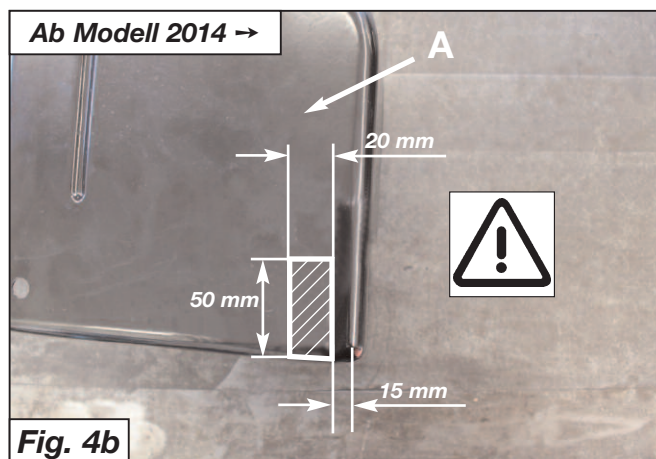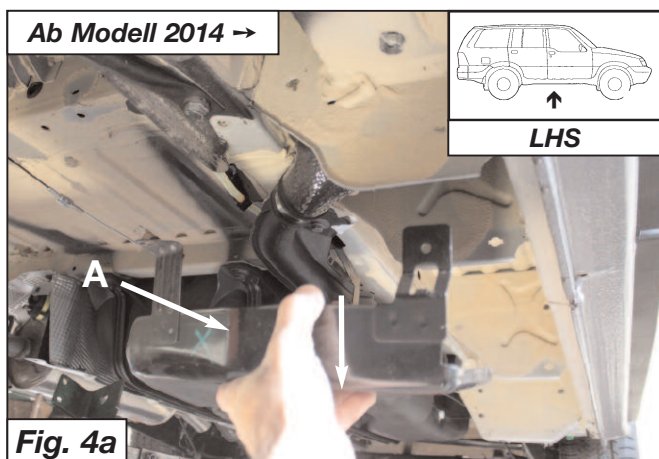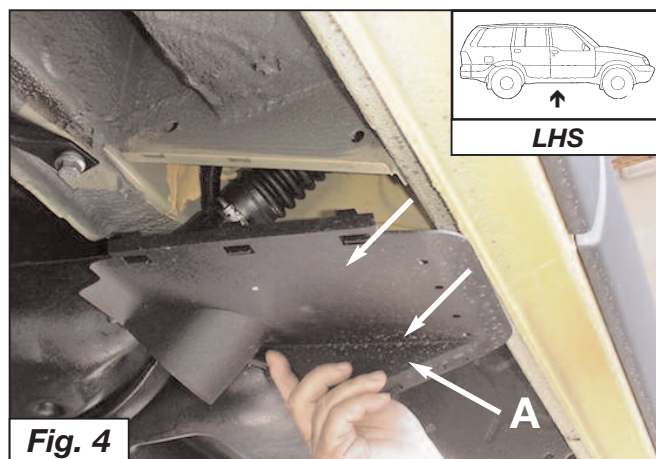
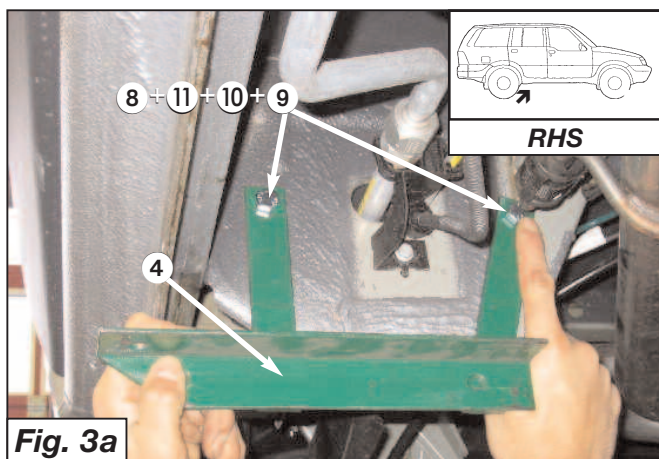
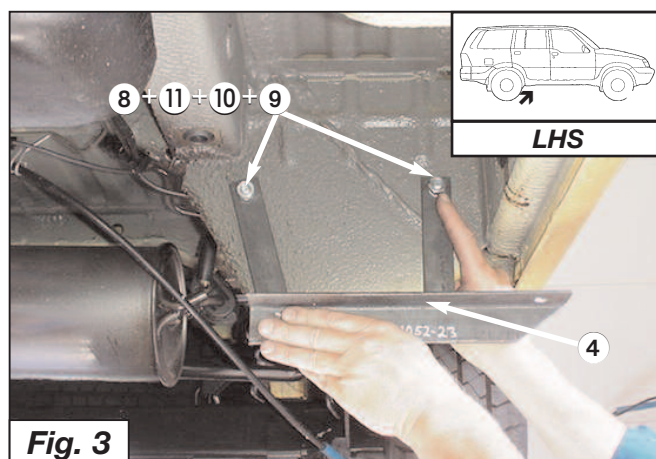
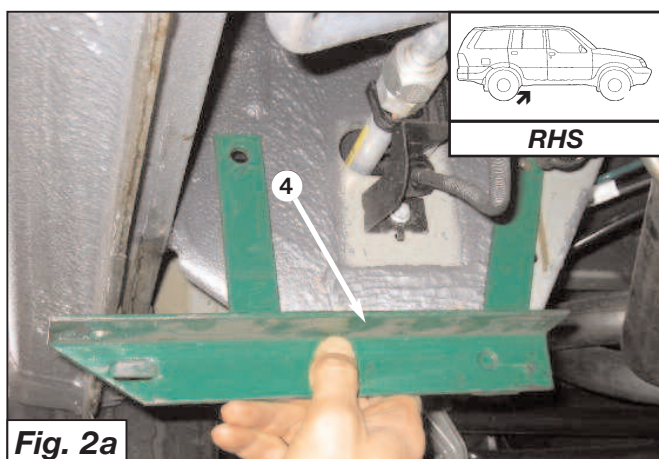
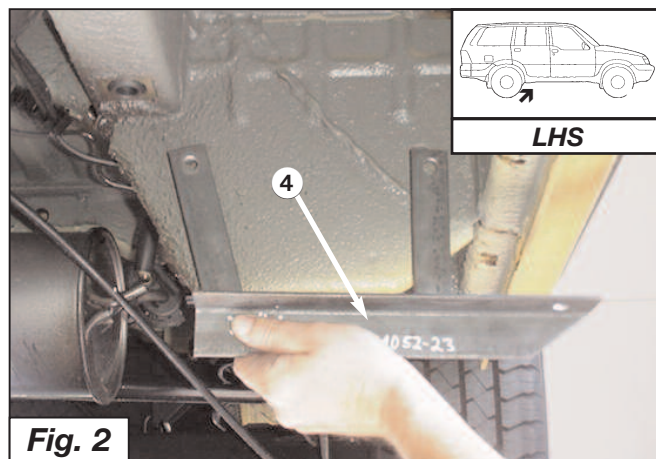


Type-Nr.: RT/2 Ausf. KR/LR

Ab Modell 2014 →

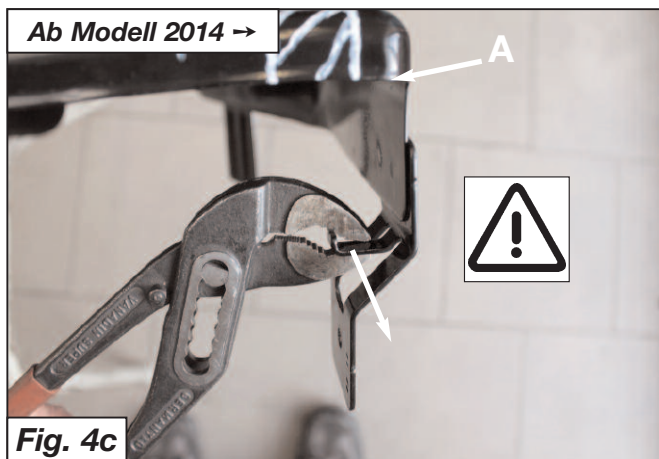

Ab Modell 2014 →

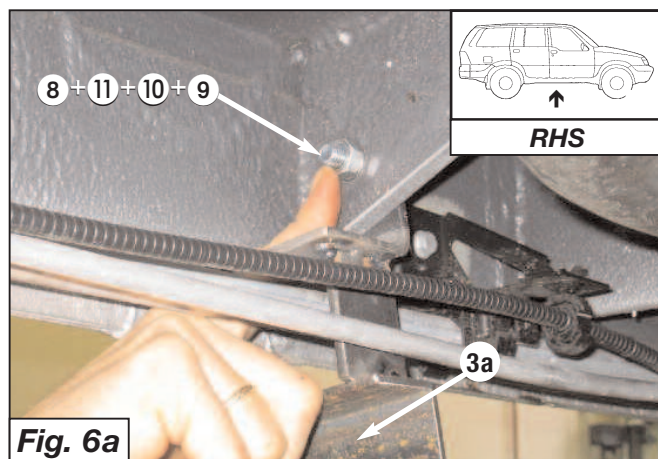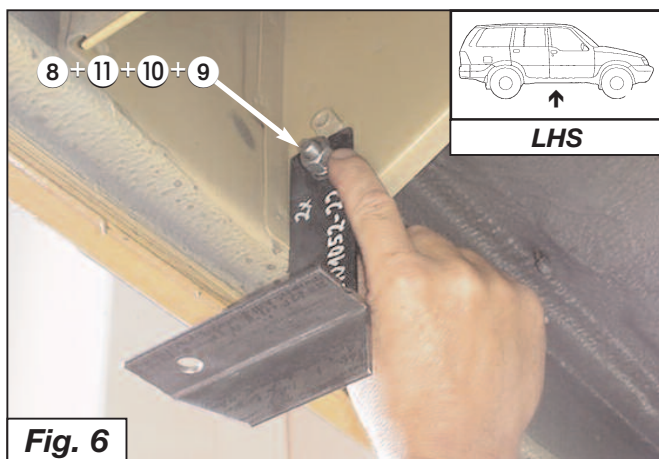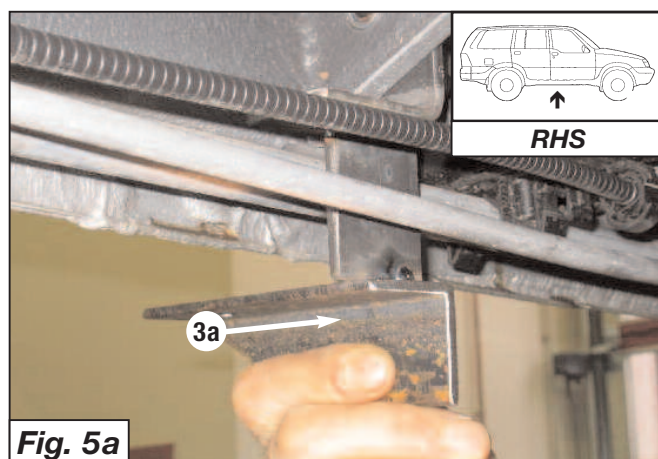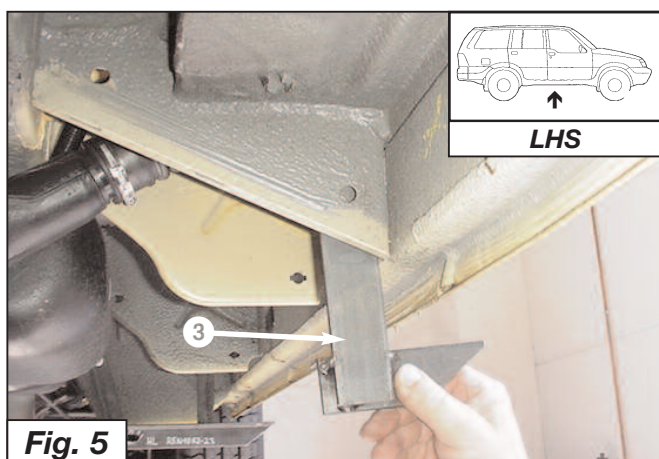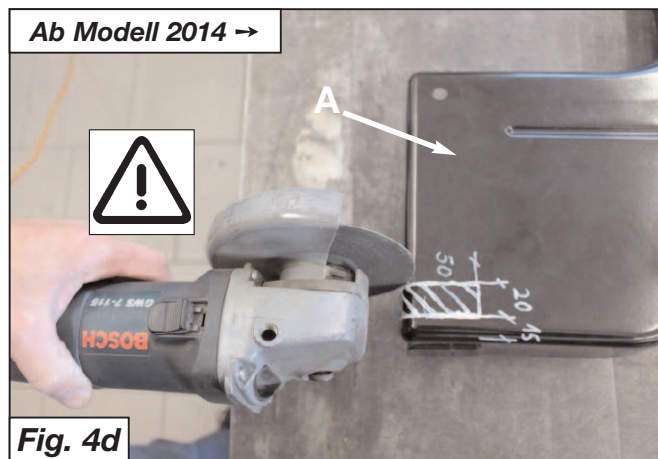

Ab Modell 2014 →

