



CITYGUARD®

- | | |
|-----------------------------------|----------------------------------|
| Ⓒ Fitting Instructions | Ⓓ Montageanleitung |
| Ⓝ Montagevoorschrift | Ⓕ Instructions de montage |
| Ⓔ Instrucciones de montaje | Ⓛ Schema di montaggio |
| Ⓢ Manual | |

Land Rover Freelander 2007→



Type Nr.: RF/6 Ausf.: A
Best.-Nr.: ROV 1235





30 Min.



All rights reserved to modify the text

Type Nr.: RF/6 Ausf.: A

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis
Herramientas necesarias / Utensile necessarie / Verktuyg somsokr vs

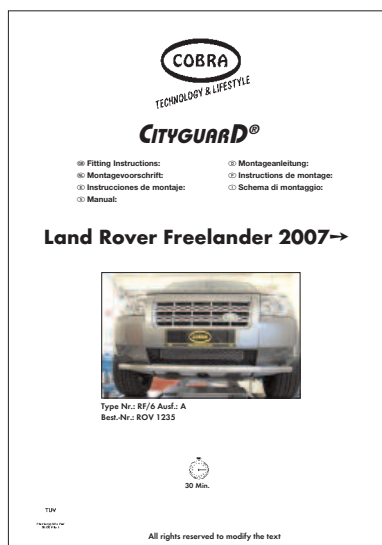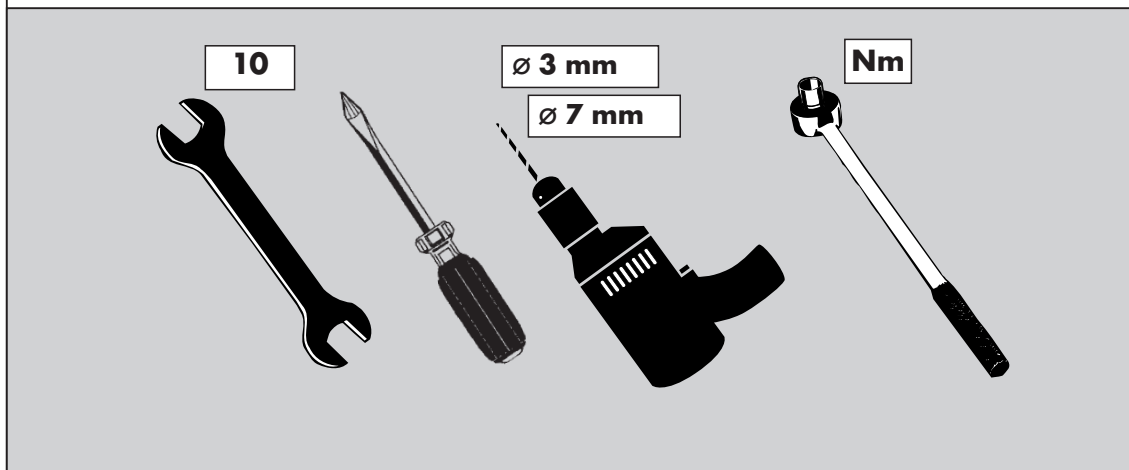

Parts list / Teileliste / Onderdelenlijst / Liste de pi ces
Lista de accesorios / Lista di pezzi / Artikel lista

			
1	CITYGUARD®		1 x
2		M 6 x 20	4 x
3		� 6,1	4 x
4		� 6,4 x 22 x 2	4 x
5		M 6	4 x

